

AT THE RECEPTION

Connect the PP to the distributor:


- ☐ Connect the RS485 cable from the distributor to the PP (See picture 1 & 2 on the right showing connector and final configuration)

HT24/28 software

- ☐ Start HT24/28w software
- ☐ Log in the software. You must have permissions to load the Portable Programmer to perform this operation.
- ☐ Go to the menu « Maintenance » and select option « Load Portable Programmer »
- ☐ Turn On the programmer using « ON ».

Load Programmer Portable

- ☐ If the software shows “locks opening” choose « LOAD » option.
- ☐ Chose option Load All Doors
- ☐ Click « Load ».
- ☐ Loading in progress, wait « End Communication».
- ☐ Go to the locks.

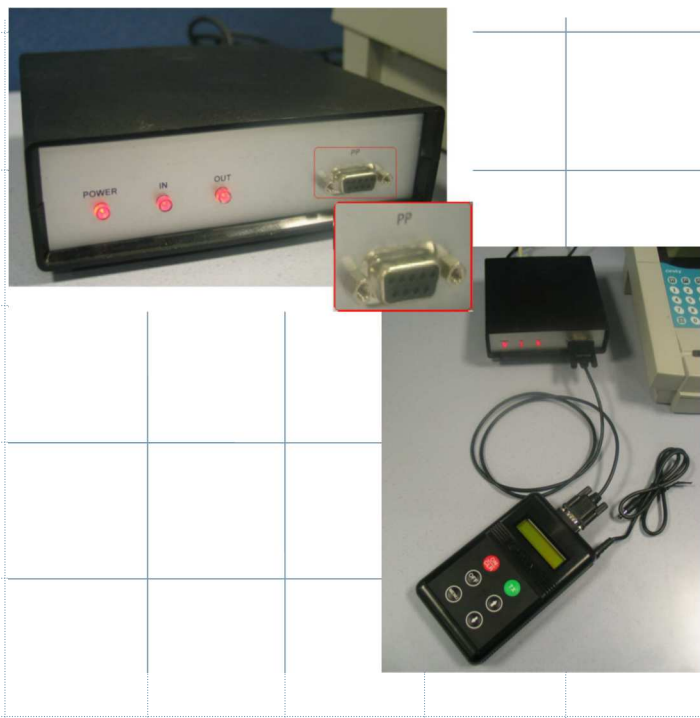

Picture 1. Windows distributor connected to the Portable Programmer.



Picture 2. RS485 cable. Color may change. Please note that both ends are DB9 male (left)

AT THE LOCKS

Update all locks

- ☐ Turn the Portable Programmer on by using the button “ON/CLR”.
- ☐ Connect the portable programmer to the lock (see picture 3&4)
- ☐ Select option 1. UPDATE using Menu
- ☐ Press Green Key « TX » without searching the correct room number.
- ☐ Proceed to the next lock.
- ☐ Repeat these steps until all locks in the property have been updated..



Picture 3 & 4. Advance Trillium lock and Trillium /HT Lock